
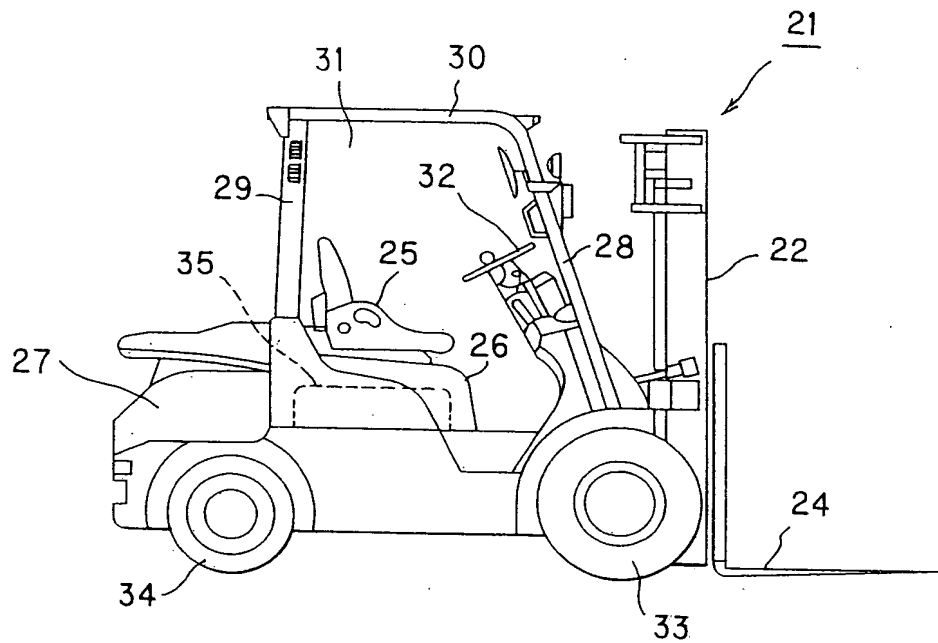


FIG. 1

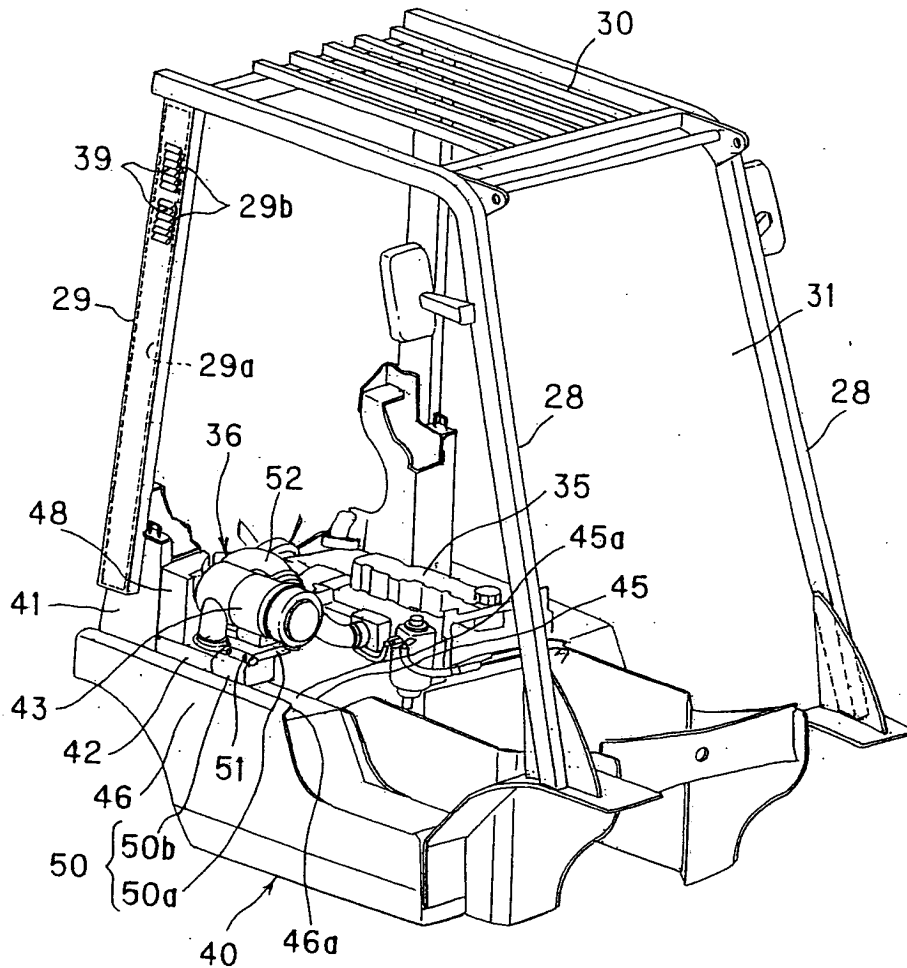


- 21 Forklift
- 22 Hoisting/Lowering Mast
- 24 Fork
- 25 Driver's Seat
- 26 Engine cover
- 27 Counterweight
- 28 Front pillar
- 29 Rear pillar
- 30 Head Guard
- 31 Driver's Cab
- 32 Steering Handle
- 33 Front Wheel
- 34 Rear Wheel

FIG. 2

28 Front pillar
 29 Rear pillar
 29a passageway
 29b Air Intake port
 30 Head Guard
 31 Driver's cab
 40 Body Frame
 41 Rear Tower
 42 Expansion Silencer
 43 Air Cleaner


45 Working Oil Tank
 45a Top Surface
 46 Side plate
 46a Upper End of Side plate
 48 Resonance Silencer
 50 Bracket
 50a Base Bracket
 50b Support Bracket
 51 Bolt
 52 Duct

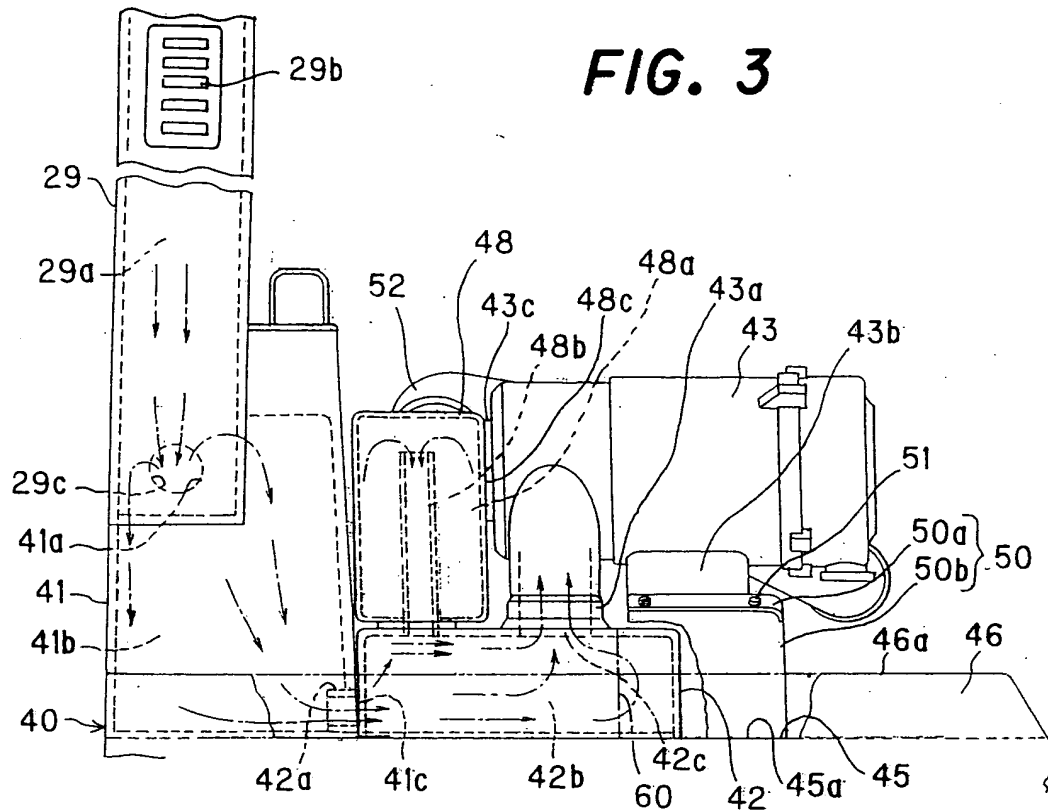FIG. 3




29 Rear Pillar
 29a Passageway
 29b Air Intake Port
 29c Connection Port
 40 Body Frame
 41 Rear Tower
 41a Connection Port
 41b Space
 41c Connection Port
 42 Expansion Silencer
 42a Connection Port
 42b Space
 42c Connection Port
 43 Air Cleaner
 43a Connection Port
 43b Lower Portion (Mounting Portion) of Air Cleaner
 43c Connection Port

45 Working Oil Tank
 45a Top Surface
 46 Side Plate
 46a Upper End of Side Plate
 48 Resonance Silencer
 48a Expansion Chamber
 48b Cylinder
 48c Case
 50 Bracket
 50a Base Bracket
 50b Support Bracket
 51 Bolt
 52 Duct

FIG. 4

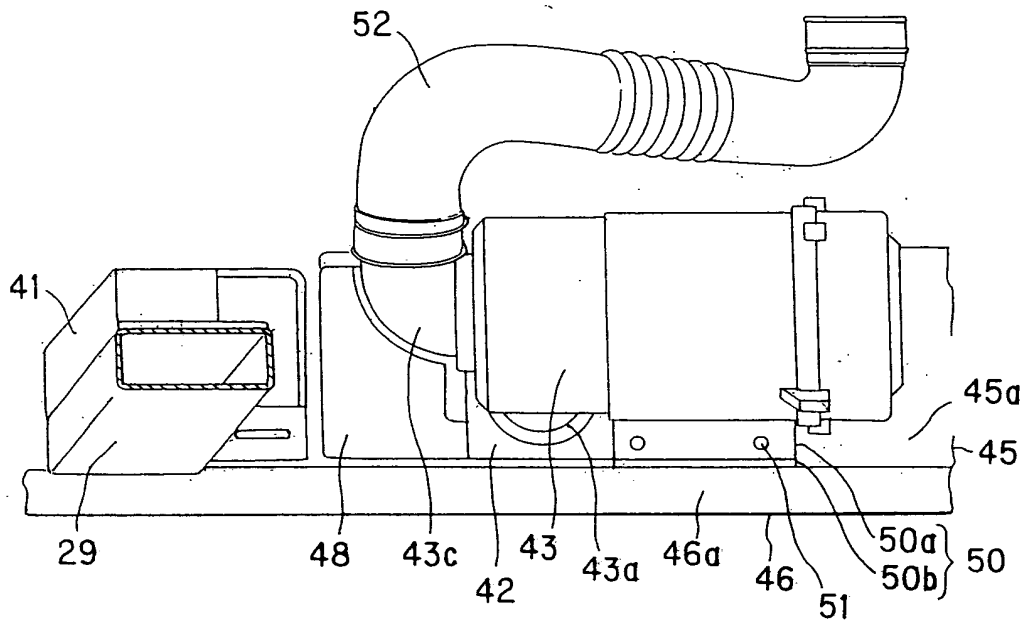


- 29 Rear Pillar
- 41 Rear Tower
- 43 Air Cleaner
- 43a Connection Port
- 43b Lower Portion (Mounting Portion) of Air Cleaner
- 43c Connection Port
- 45 Working Oil Tank
- 45a Top Surface
- 46 Side Plate
- 46a Upper End of Side Plate
- 48 Resonance Silencer
- 50 Bracket
- 50a Base Bracket
- 50b Support Bracket
- 51 Bolt
- 52 Duct

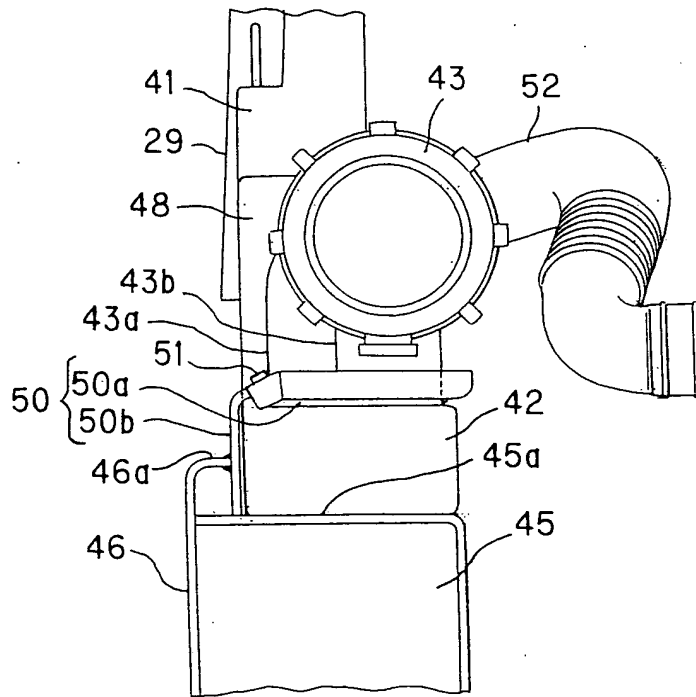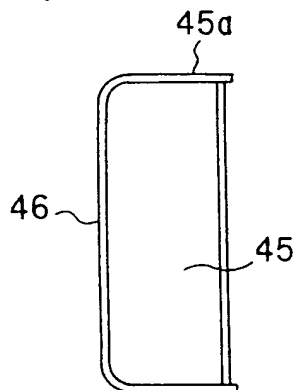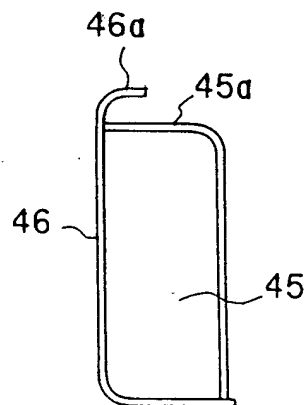FIG. 5A**FIG. 5B****FIG. 5C**


29 Rear Pillar
 41 Rear Tower
 42 Expansion Silencer
 43 Air Cleaner
 43a Connection Port
 43b Lower Portion (Mounting Portion) of Air Cleaner
 45 Working Oil Tank
 45a Top Surface

46 Side Plate
 46a Upper End of Side Plate
 48 Resonance Silencer
 50 Bracket
 50a Base Bracket
 50b Support Bracket
 51 Bolt
 52 Duct

FIG. 6

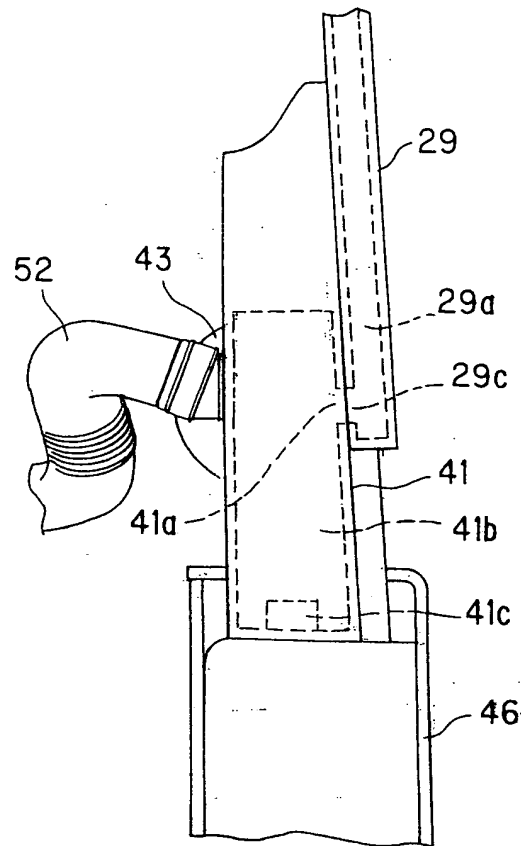

- 29 Rear Pillar
- 29a Passageway
- 29b Air Intake Port
- 29c Connection Port
- 41 Rear Tower
- 41a Connection Port
- 41b Space
- 41c Connection Port
- 43 Air Cleaner
- 46 Side Plate
- 52 Duct

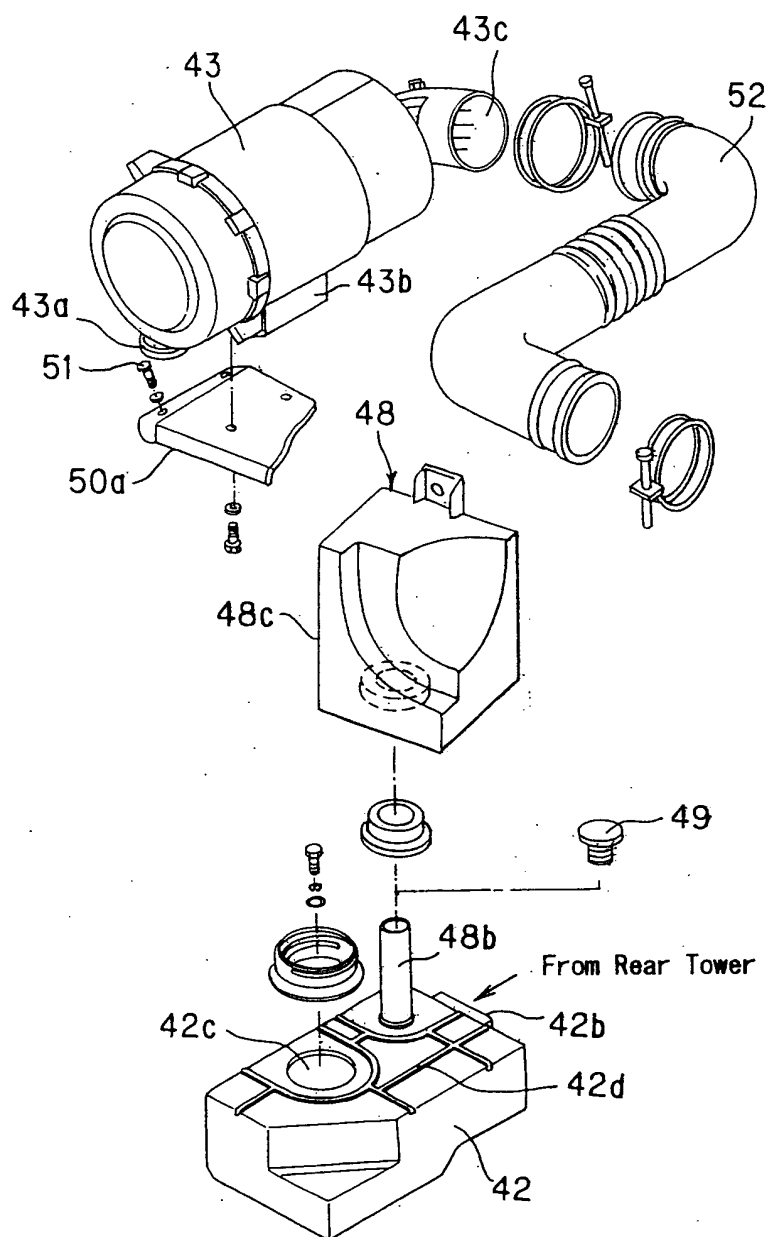FIG. 7

42 Expansion Silencer

42b Space

42c Connection Port

42d Reinforcement Rib

43 Air Cleaner

43a Connection Port

43b Lower Portion (Mounting Portion) of Air Cleaner

43c Connection Port

48 Resonance Silencer

48b Cylinder

48c Case

49 Lid

50a Base Bracket

51 Bolt

52 Duct

FIG. 8



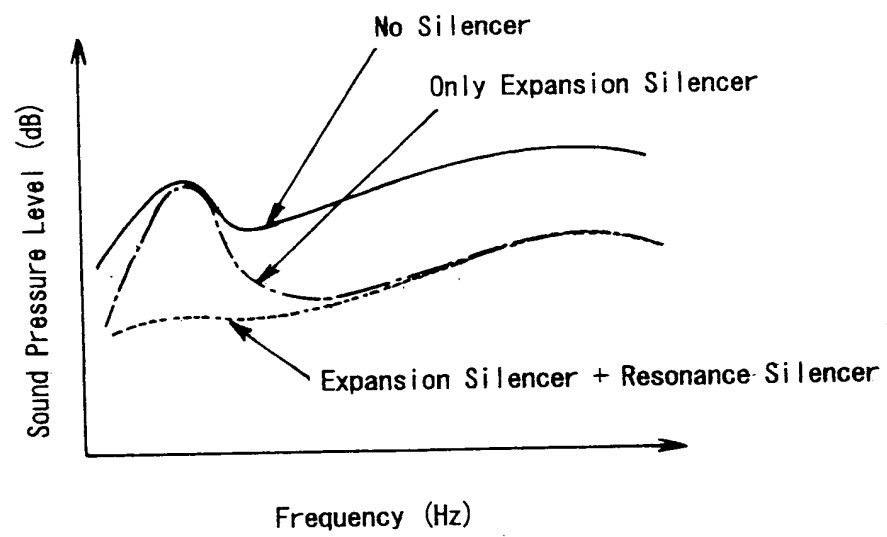


FIG. 9

29 Rear Pillar
 41 Rear Tower
 41c Connection Port
 41d Rear Tower Base
 42 Expansion Silencer
 42b Space
 42c Connection Port
 43 Air Cleaner
 43b Lower Portion (Mounting Portion) of Air Cleaner
 43c Connection Port
 45 Working Oil Tank
 45a Top Surface


46 Side Plate
 46a Upper End of Side Plate
 48b Cylinder
 49 Lid
 50 Bracket
 50a Base Bracket
 50b Support Bracket
 51 Bolt
 52 Duct

FIG. 10

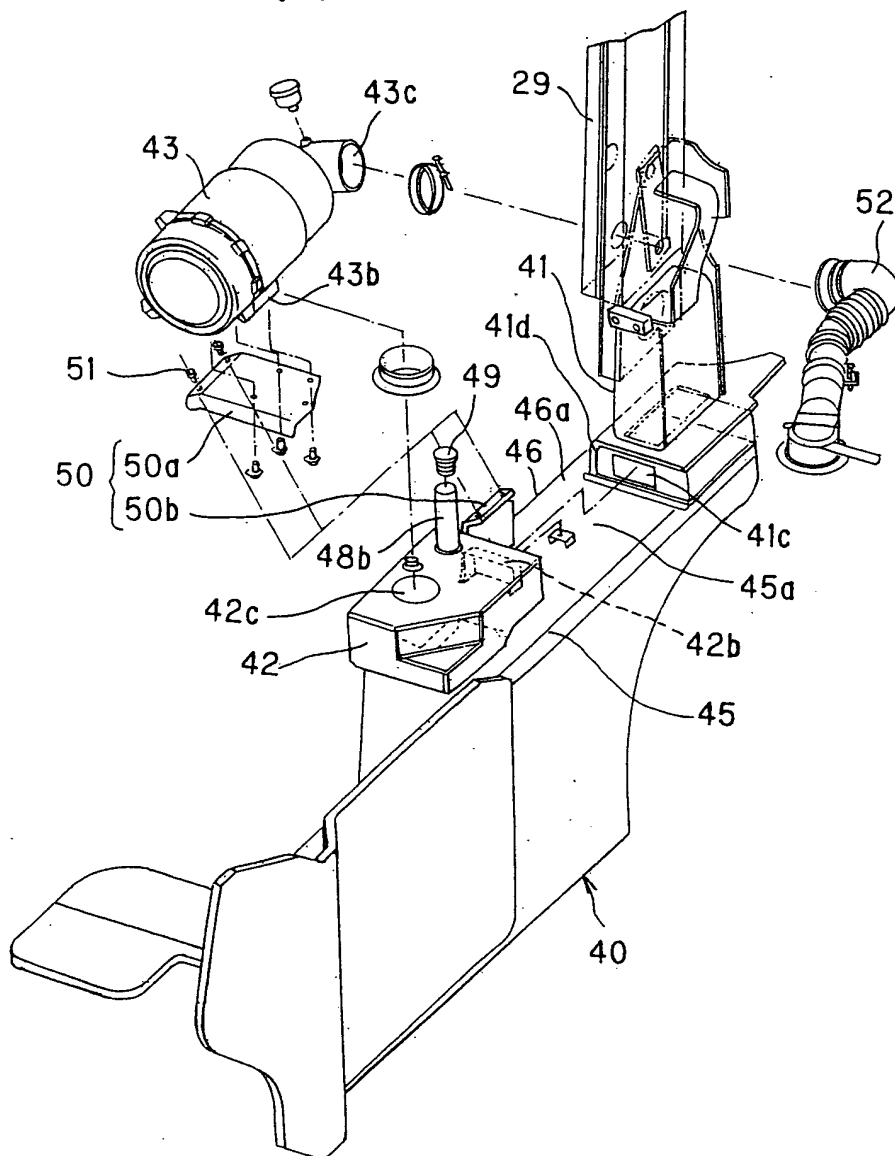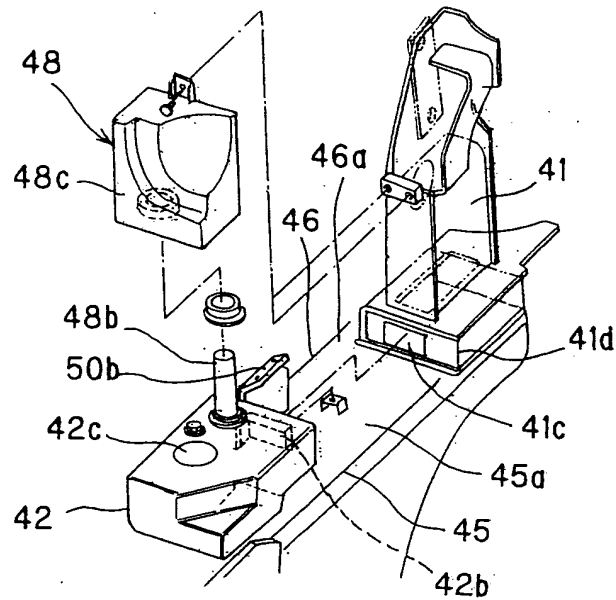


- 41 Rear Tower
- 41c Connection Port
- 41d Rear Tower Base
- 42 Expansion Silencer
- 42b Space
- 42c Connection Port
- 45 Working Oil Tank
- 45a Top Surface
- 46 Side Plate
- 46a Upper End of Side Plate
- 48 Resonance Silencer
- 48b Cylinder
- 48c Case
- 50b Support Bracket

FIG. 11

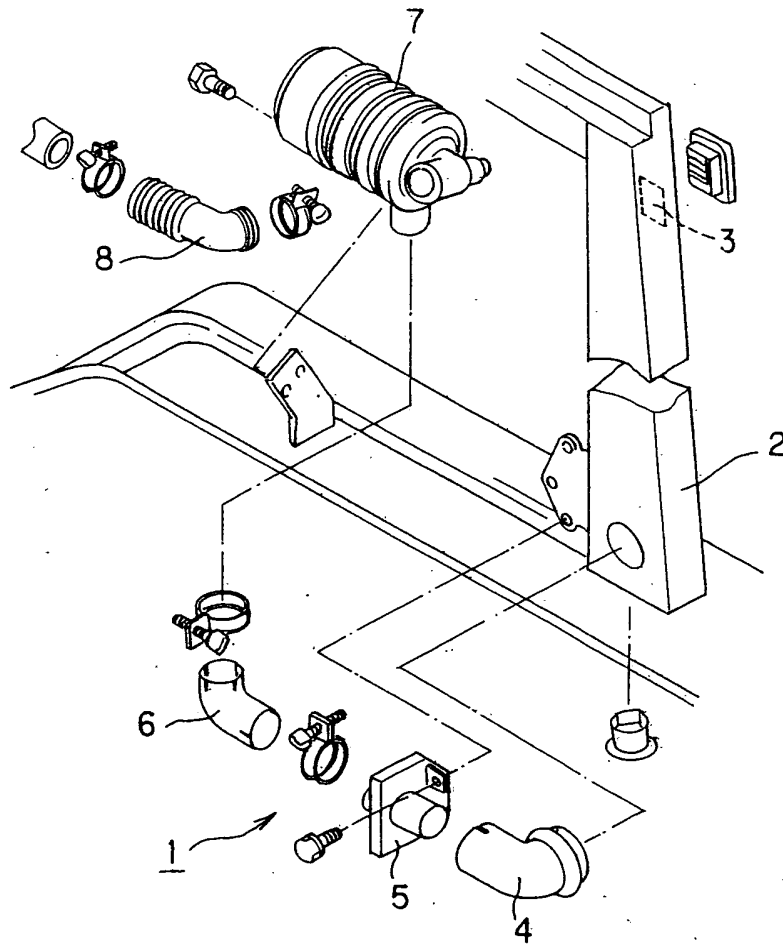

- 1 Air Intake System
- 2 Rear Pillar
- 3 Air Intake Port
- 4 Duct
- 5 Expansion Silencer
- 6 Duct
- 7 Air Cleaner
- 8 Duct

FIG. 12

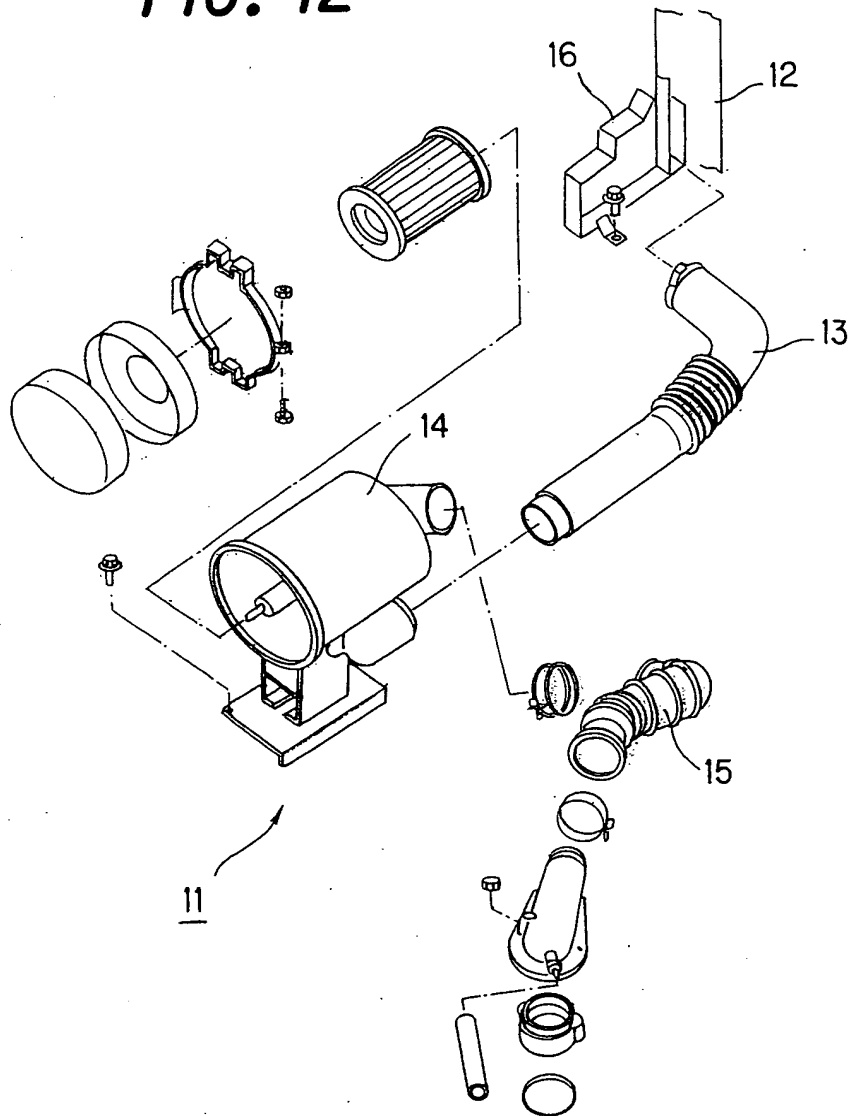

- 11 Air Intake System
- 12 Rear Pillar
- 13 Duct
- 14 Air Cleaner
- 15 Duct
- 16 Resonance Silencer